

# KCombo-7 and KP-708 Quick Installation Manual



This manual is applied to KCombo-7 and KP-708

## Verifying the contents

When you first time open the box of your KCombo-7 or KP-708 plotter please confirm you have following items inside the box :

- Display unit
- Quick release mounting
- Quick Start Manual and Quick Installation Manual
- Standard accessories pack(one power/data cable, 2 spare fuses, 3 desktop mounting screws, 4 panel mounting screws)

*Note : External GPS antenna KA-07 with 10 meters cable(For KCombo-7 and KP-708) and transducer (NBM40-50/200 or KTD-520) with 10 meters cable (KCombo-7 only) are supplied as an option.*


## The connectors on the rear panel of KCombo-7 and KP-708

The following figures just to show you how these connectors look like.




- External GPS antenna (supplied as an option)
- Power/Data cable
- Transducer/Temperature sensor (Supplied as an option, for KCombo-7 only)

# Interconnections for KCombo-7 and KP-708

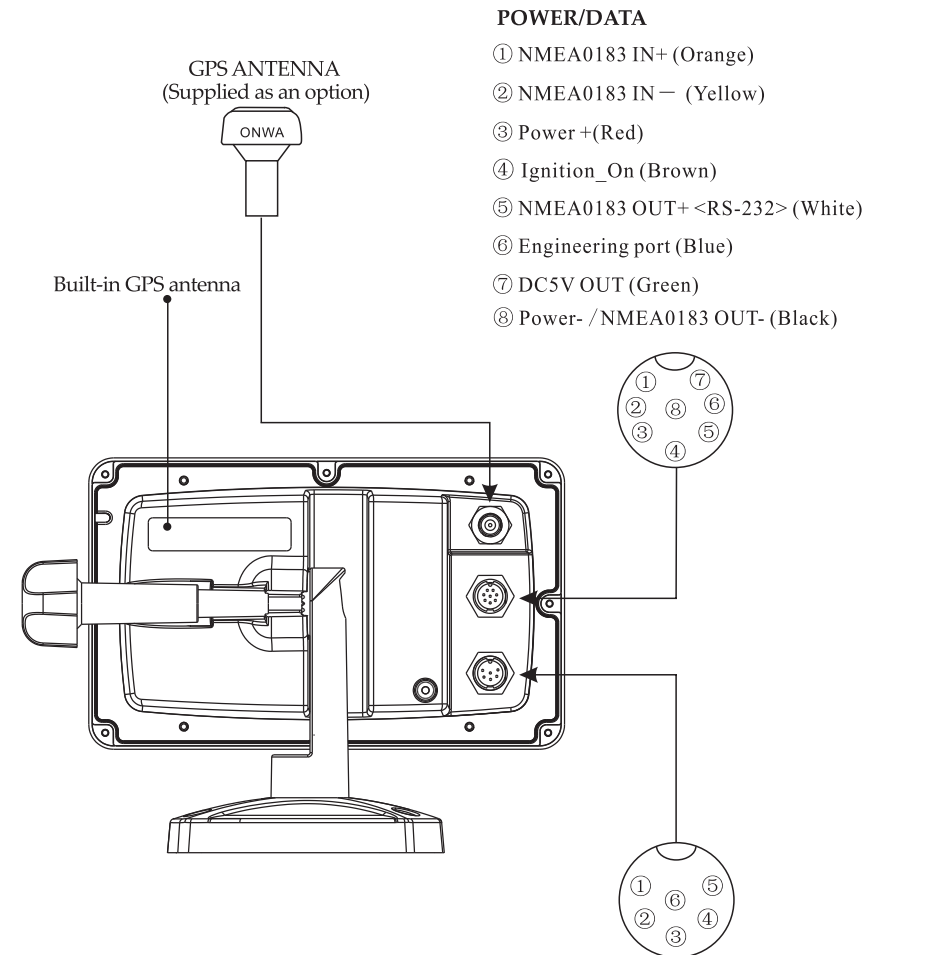

## Interconnections for KCombo-7 and KP-708

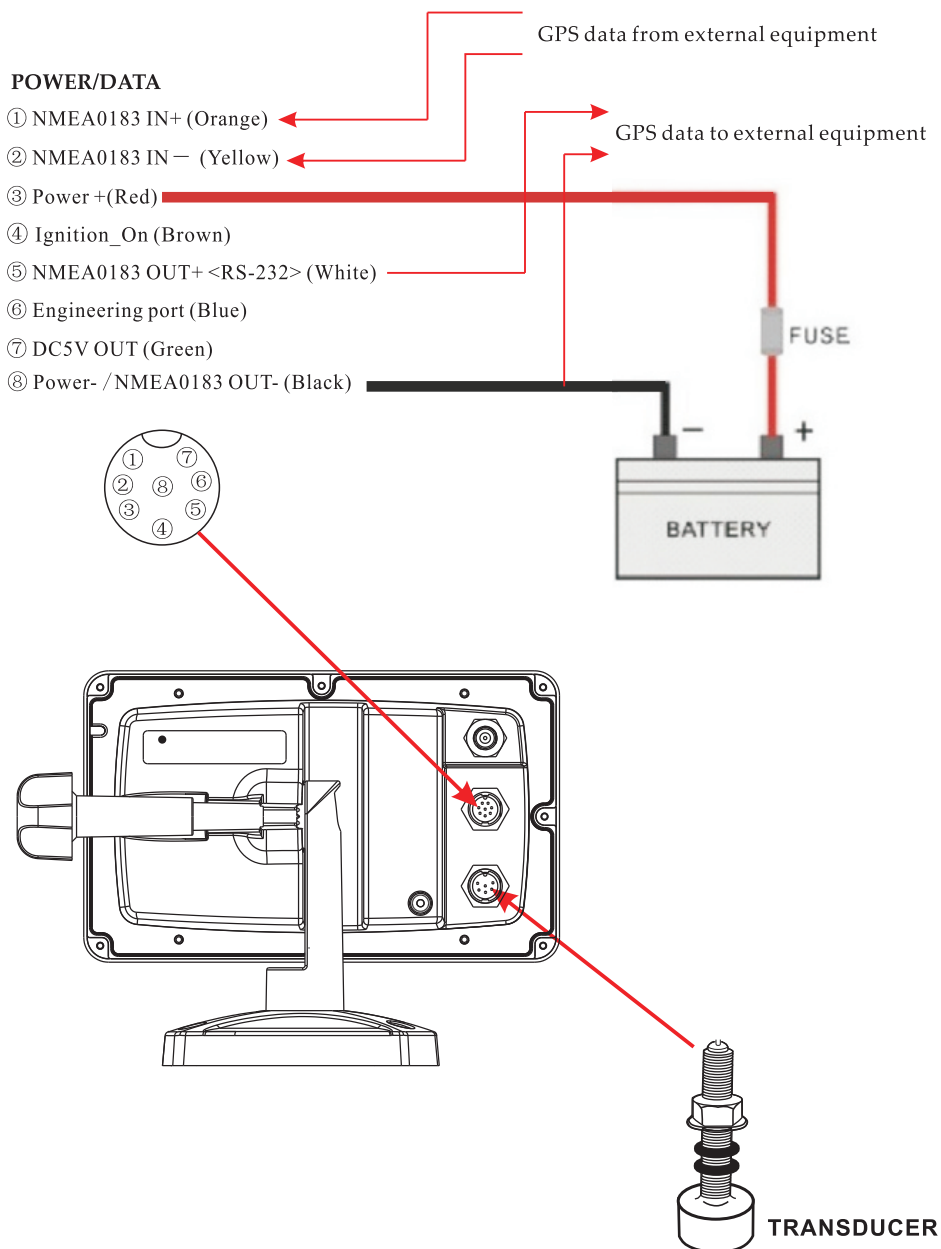

## Specifications

Waypoints/icons:	12,000 waypoints with name, symbol, 10 proximity waypoint
Routes:	30 routes up to 170 waypoints each, plus MOB and Track Navigation or Goto Track modes
Tracks:	8,000 points automatic track log; 10 saved tracks(up to 8,000 track points each) lets you retrace your path in both directions
Drawing Marks:	1000
Drawing Lines:	2000
Drawing Placename:	1000
Color for drawing :	8
Alrms:	XTE, Anchor drag, arrival, speed, voltage, proximity waypoint and time, AIS alarm.
Pallette:	Normal Daylight exposed to sunlight Night in dark environment NOAA paper chart colors
Tides:	Built-in worldwide tide data
Position format:	Lat/Lon
Basemap:	Built-in ONWA K-Chart
External Map:	SD Cards slot for C-Map MAX and Onwa KChart
User data storage:	Internal backup of user settings, or external SD-card
Plot Inerval:	5s to 60mins or 0.01 to 10nm
Plotting scales:	0.001 to 700nm
Interface :	RS232, NMEA0183 V3.01
NMEA Sentence supported :	INPUT, auto scan baudrate + GGA, GLL, RMC, VTG, ZDA, GSA, GSV, DBT, DPT, HDG, HDT, HDM, MTW, VHW, MWD, MWV, VPW, VWR, VWT, XDR, TLL, TTM, VDM, VDO OUTPUT, Baudrate : Selectable 4800, 9600, 19200, 38400 + GGA, GLL, RMC, AAM, APB, APA, BOD, BWC, BWR, DBT, DPT, HDT, MTW, MWD, VPW, , VWR, VWT, RMB, TLL, VTG, WPL, XTE, ZDA, ZTG, HDT_FROM_HDG, WCV, ZDL

For more detail please download the full manual from <http://www.onwamarine.com>

